


# AiroPro Sprayer Breakout and Parts Diagram

Airo Pro 1 Gallon Sprayer- 501-504-210

Airo Pro .5 Gallon Sprayer- 501-502-180

Airo Pro 1.5 Gallon Sprayer- 501-505-180

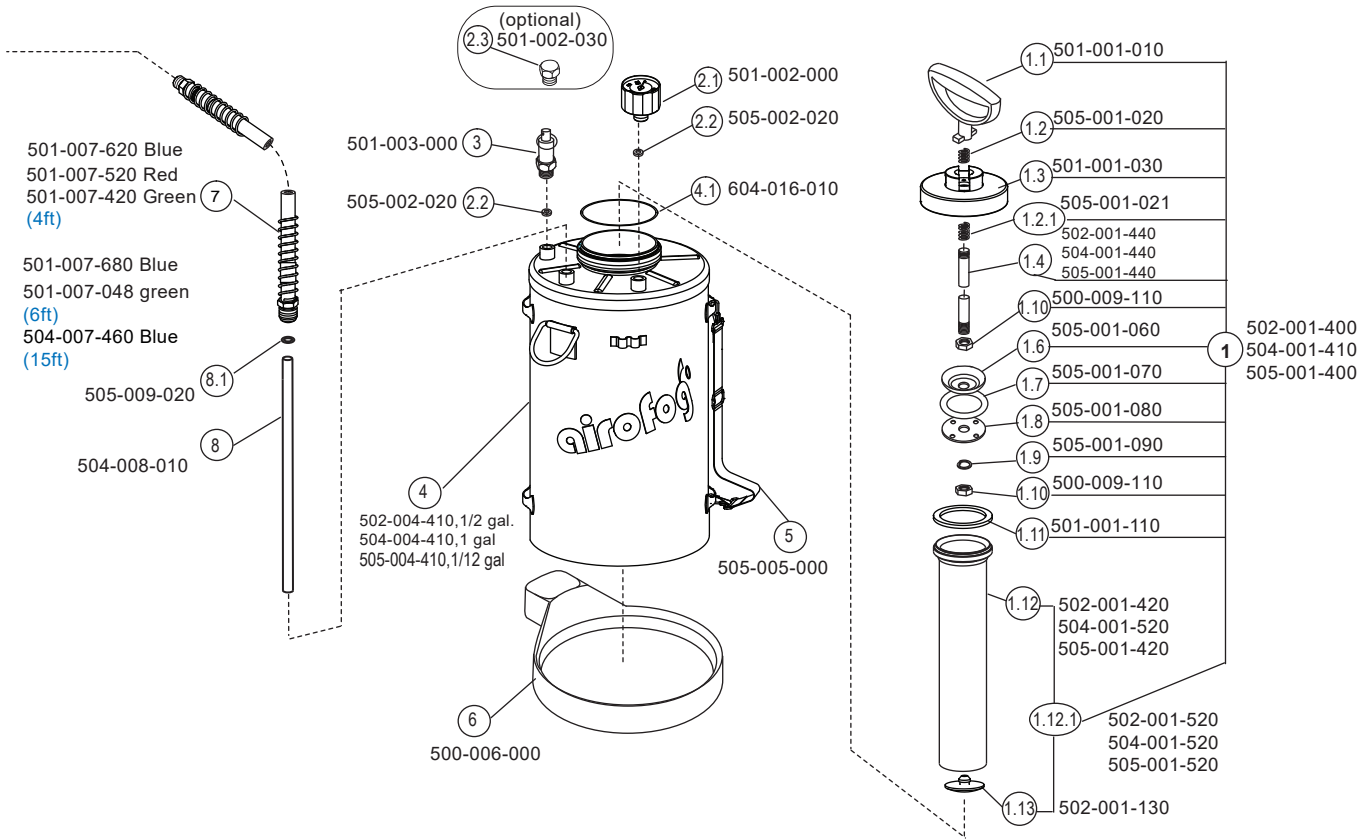

## AiroPro Sprayer Spare Part List

Pos	Part No	Description
1	505-001-400	Pump Assembly, 1 1/2 Gallon
1	504-001-410	Pump Assembly, 1 Gallon
1	502-001-400	Pump Assembly, 1/2 Gallon
1.1	501-001-010	Handle, Pump
1.2	505-001-020	Spring, Pump Lock
1.2.1	505-001-021	Spring, Buffer
1.3	501-001-030	Cap, Pump
1.4	505-001-440	Rod, Plunger 1 1/2 Gallon
1.4	504-001-440	Rod, Plunger 1 Gallon
1.4	502-001-440	Rod, Plunger 1/2 Gallon
1.6	505-001-060	Plate, Spreader
1.7	505-001-070	Plunger Piston O-ring (Viton inside cylinder)
1.8	505-001-080	Plate, Back
1.9	505-001-090	Washer, Lock
1.10	500-009-110	Lock Nut, Plunger
1.11	501-001-110	Gasket, Pump
1.12	505-001-420	Pump Cylinder, 1 1/2 Gallon
1.12	504-001-520	Pump cylinder, 1 Gallon
1.12	502-001-420	Pump Cylinder, 1/2 Gallon
1.13	502-001-130	Valve, Check
2.1	501-002-000	Gauge, 0-60 psi
2.2	505-001-090	Washer
3	501-003-000	Pressure Relief Valve
4	505-004-410	Tank, 1 1/2 Gallon
4	504-004-410	Tank, 1 Gallon
4	502-004-410	Tank, 1/2 Gallon
4.1	604-016-010	Tank Top-Ring
5	505-005-000	Adjustable Carrying Strap
6	500-006-000	Bottom, Blue
7	501-007-620	Hose, 4 Foot Blue
8	505-008-010	Tube, Syphon 1 1/2 Gallon
8	504-008-010	Tube, Syphon 1 Gallon
8	502-008-010	Tube, Syphon 1/2 Gallon
8.1	505-009-020	Syphon Tube-O Ring