

airofog[®]
USA



*Puff Duster
Manual*

Safety & Maintenance

Airofog Puff Dusters referred to in this document are designed for use by qualified and experienced personnel. Please read this instruction thoroughly before usage.

Safety Instruction

- Keep out reach of children
- Before use, check condition and proper function of the duster
- Wear protective equipment as directed by the insecticide label
- Follow label instructions of insecticide dust
- Always keep vial dry and clean
- Do not expose duster to solvents or extreme heat
- Direct dust or granular only at surfaces to be treated
- Do not fill vial with any liquid or gel
- Always wash hands after use
- Always wear personal protective equipment (PPE) when handling dangerous substances
- Never blow through clogged nozzles with your mouth
- Always replace damaged, or malfunctioning parts

Care and Maintenance

- Remaining pesticide in the vial should be removed after using
- Clean puff bulb and vial with soft brush, and soap and water
- Replace bulb or extension if cracked

Caution



It is the operator's responsibility to ensure the safe use of the sprayer and that they're fully compliant with national or local regulations governing compression sprayer and applications of pesticides.



AIROFOG USA is not liable for damages that has occurred due to improper use/repair/maintenance, the use of non-recommended or non OEM parts, and acceptance of damaged/broken sprayers for any reason.



Airofog USA
15074 Aviation Loop Drive
Brooksville, FL 34604
USA

+1-352-593-5152
airofog@airofogusa.com
www.airofogusa.com

Operation & Troubleshoot

Operation

- Remove the vial and fill to approximately 2/3 full with insecticide
- Screw on the vial and gently shake duster
- Squeeze the puff bulb to discharge dust from tip
- Use the 20 inch extension to treat hard to reach areas
- **Do not fill vial to the top with insecticide to allow dust to float inside vial**

Troubleshooting

Problem Not enough dust or granular being discharged

- Solution**
- Shake duster gently to loosen contents
 - Add more dust or granular to vial
 - use cleaning rod if there is a blockage

Problem Dust leaking around cap or extension

- Solution**
- Check to see cap is properly tightened
 - Replace cap or extension if cracked

Problem Too much dust or granular

- Solution**
- Reduce the amount of pesticide in vial

Airofog Guarantee

Airofog USA guarantees the Puff Duster to be free of defects in materials and workmanship to the original purchaser for a period of one(1) year on labor and parts which are not subject to usual wear. During this period, AIROFOG USA will replace and/or repair the parts and manufacturer faults on the exclusive judgment of our technical department free of charge.

Shipping and dispatch of defect equipment will be at original purchaser's expense

Guarantee does not cover damages occurred during transport or by incorrect handling, tampering, use, or the use of non-recommended products and so on.

Under no circumstances will AIROFOG USA be liable for damages due to improper use or application.


Under no circumstances will AIROFOG USA be responsible for damages to any persons or property.



Airofog USA
15074 Aviation Loop Drive
Brooksville, FL 34604
USA

+1-352-593-5152
airofog@airofogusa.com
www.airofogusa.com

Puff Duster Assembly

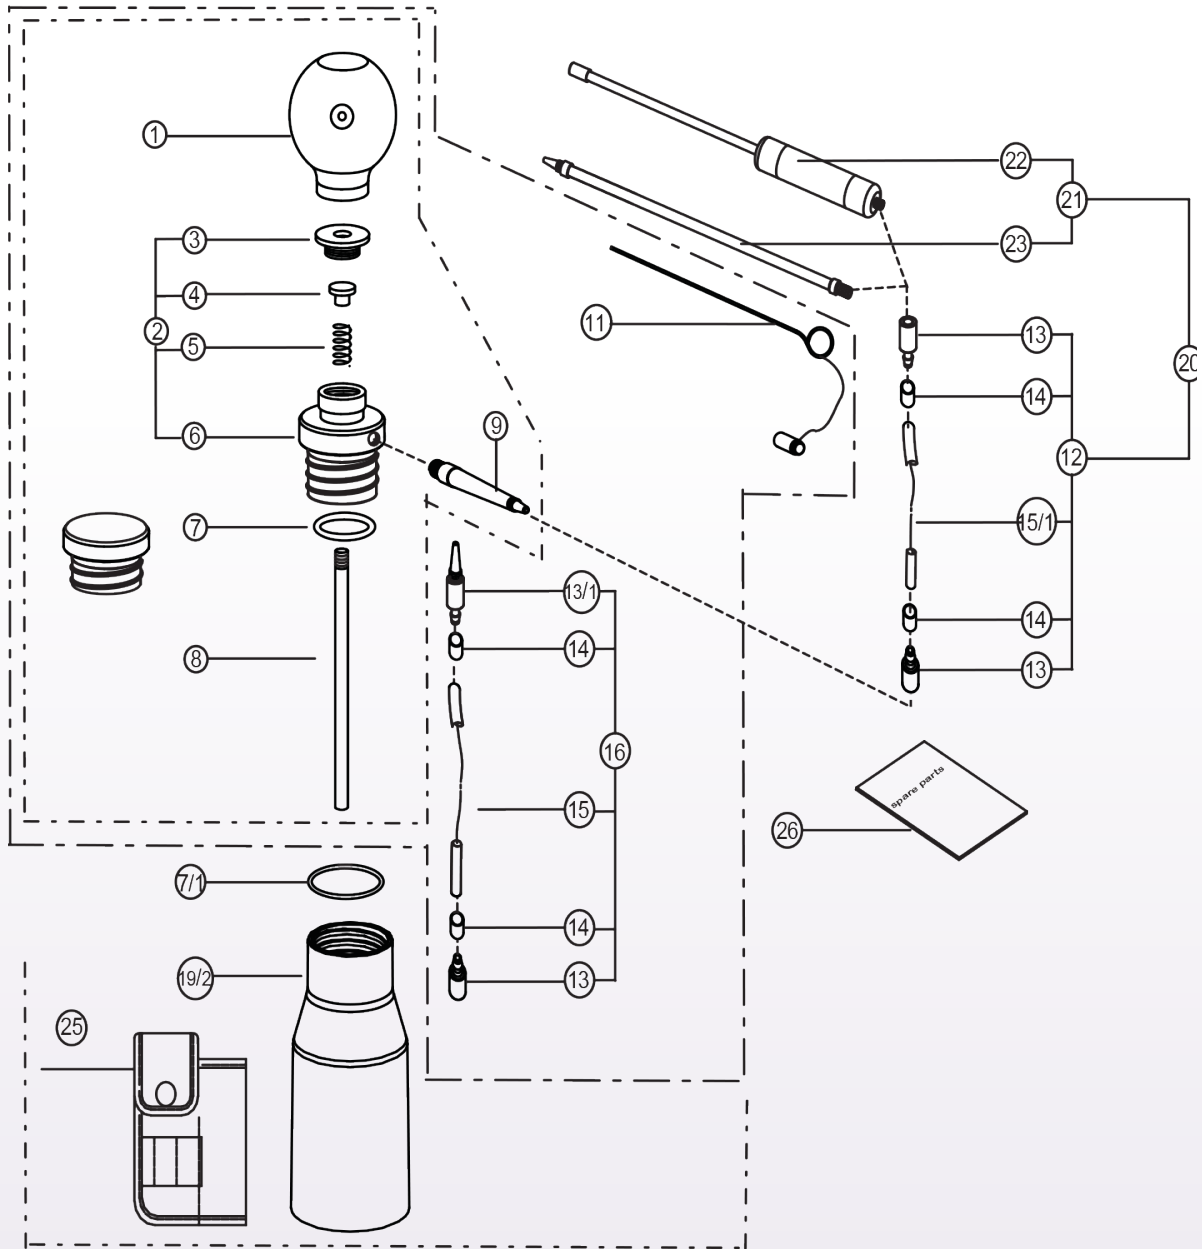

Airofog USA
15074 Aviation Loop Drive
Brooksville, FL 34604
USA

+1-352-593-5152
airofog@airofogusa.com
www.airofogusa.com

Puff Duster Parts List

Pos.	Part no.	Description
1	602-001-000	Puff bulb
2	602-002-001	Check valve assembly (3,4,5,6)
3	602-002-010	Check valve cover
4	602-002-020	Check valve seat
5	602-002-030	Check valve spring
6	602-002-041	Airofog valve body
7	602-002-050	O-ring (22x2.5 nitrile)
7/1	412-017-000	O-ring
8	602-003-000	Supply tube
9	602-004-000	Discharge
11	602-006-010	Rod assembly
12	602-005-000	Extension hose cpl. (13x2, 14x2, 15)
13	602-005-010	Hose connector
13/1	602-005-040	Nozzle adapter
14	602-005-020	Hose holder
15	602-005-030	Hose (9.8 in)
15/1	602-009-120	Hose (4 ft)
16	602-009-000	Extension tube with nozzle (13/1, 13, 14x2, 15/1)
19/2	602-007-020	Bottle
20	602-008-000	Extension assembly (12,21)
21	602-008-020	Extension discharge assembly (22, 23)
22	602-008-030	Extension handle
23	602-008-040	Extension lance
25	602-010-000	Carrying pouch
26	602-602-000	Instruction manual
	601-021-000	Belt (optional)



Airofog USA
15074 Aviation Loop Drive
Brooksville, FL 34604
USA

+1-352-593-5152
airofog@airofogusa.com
www.airofogusa.com